


Printing with icc Profiles

For Photoshop CC15

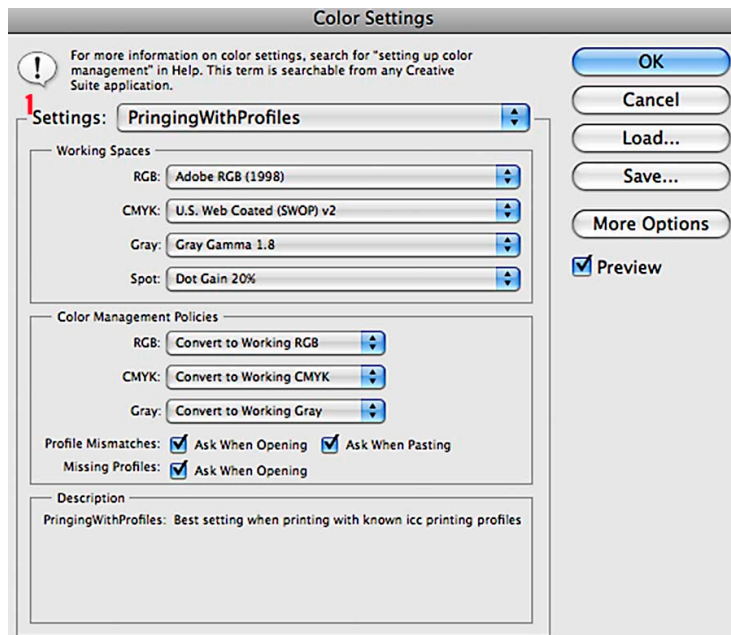


Color Settings Dialog

In Photoshop CC15 set Color Settings to Adobe RGB 1998. To access the Color Settings dialog, choose Edit then Color Settings from the top menu.

1. The first time you open this setting this setting will not be available. Make it yourself by selecting the options shown to the left. After it is set up press the Save button and save the setting. I use Printing With Profiles as the title of my setting. In the future you can select this to automatically fill the options with the ones most appropriate for printing using color profiles. Click **OK**.

Print Window

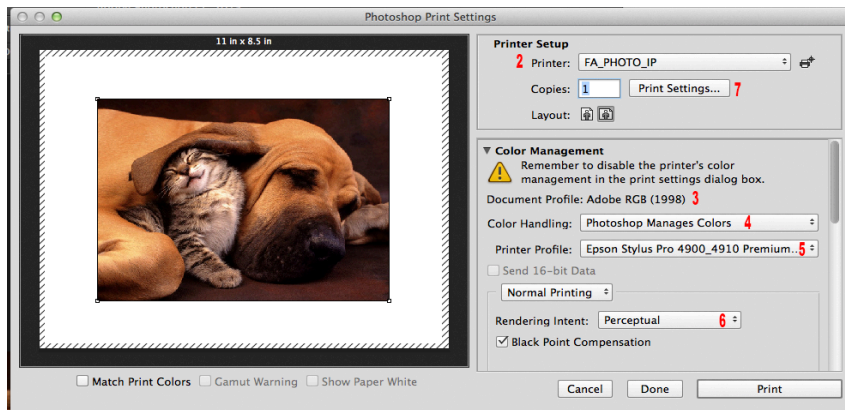

To Print an Image

From the top menu bar, select File then Print.

2. Select the correct printer from the drop down menu.

3. Make sure the Document Profile is set to Adobe RGB 1998.


4. Under Color Handling, select Photoshop Manages Colors.

5. The Printer Profile should be set to the paper you are printing on. For example, Pro4900 PremiumLuster is the profile for Epson Premium Luster paper. If you are unsure, check the paper manufacturer's website.

6. Set Rendering Intent to Perceptual or Relative Colorimetric.

7. Click the Print Settings button on the Print window. On the dropdown menu that says "layout" select Print Settings."

Printer Settings

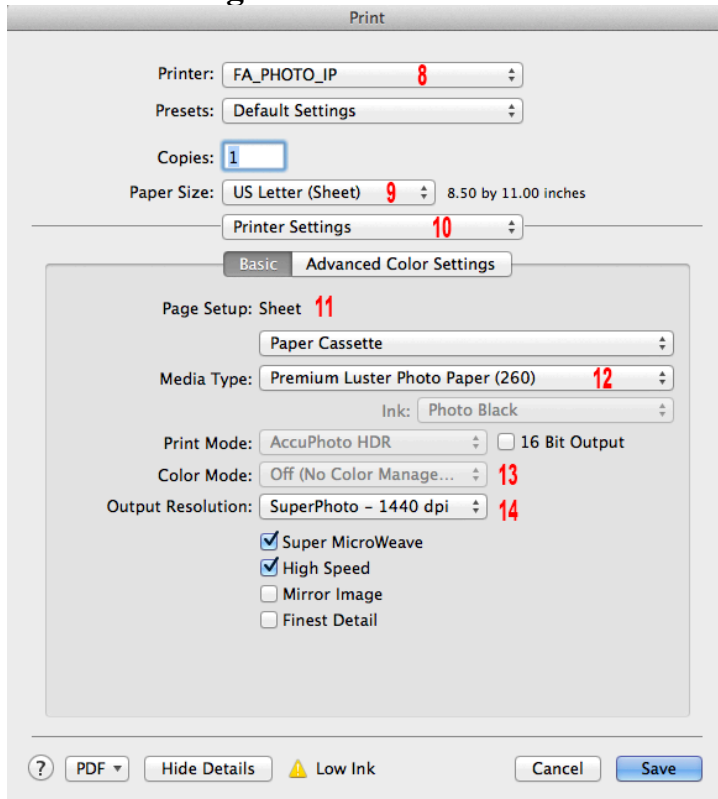

8. Make sure the correct printer is selected from the drop down menu.

9. Select your paper size.

10. Click on Layout and drop down until you reach Printer Settings.

11. Page setup should say Sheet paper. If it says Roll you've selected the wrong page size and type, go back to #9 and check the paper setting. Choose Paper Cassette for lower paper drawer.

12. Under Media Type, select the type of paper you are using.

13. Color Mode should be Off (No Color Management). If its not then check item #3. An sRGB profile is the probable cause for this.

14. For Output Resolution select SuperPhoto - 1440 dpi.

Click **Save** and you will be returned to the Print Window where you can confirm the paper orientation and size

in the preview window before you print. If everything is set correctly you can click **Print** to print your image.

Please add your name to the chart on the clipboard between the printers and indicate how many prints you've made. A new list will go out on Sundays. You will be expected to pay the cage by the end of the following week.

Nozzle Check

Do a nozzle check when the printers are first turned on. Load scrap paper into the printer then on the Matte printer press the menu key once, then the down arrow, then the menu key 3 more times. On the Photo printer press the print drop icon, select Nozzle check and Manual Nozzle check. If the test shows dirty nozzles then hold the menu button for 5 seconds to clean the heads.

