

Using the Rear Manual Feed Slot

You may use the rear manual feed slot for thicker media types other types of paper.

1. Make sure the printer is turned on, then press the ◀ Paper Source button until the □ sheet icon appears on the LCD screen.
2. Extend the paper support.
3. Adjust the edge guide according to the paper width.
4. Align the sheet with the right edge of the slot and insert it until it meets resistance. Make sure the sheet is straight.
5. Press the ▼ button to feed the paper.

